

Pre-Assembled Beltrac® Posts

Parts List:



Required Tools

During shipping, your Beltrac Post may have loosened from the base.

Please tighten the post-to-base connection before using your Beltrac Post.

1. Bottom rim of post tube should be flat against base. See Figure A.
2. Tilt post on its side while maintaining flush fit between post and base.
3. On bottom of the base: Tighten the center hex bolt until tightly secured. See Figure B.
4. Check placement of post on the base and re-tighten hex bolt if necessary.
5. Stand post upright and position post for use.

NOTE: Allen wrench not included.

If you need one, please call customer service at 800-624-6225 and we will gladly send you one at no charge.

