


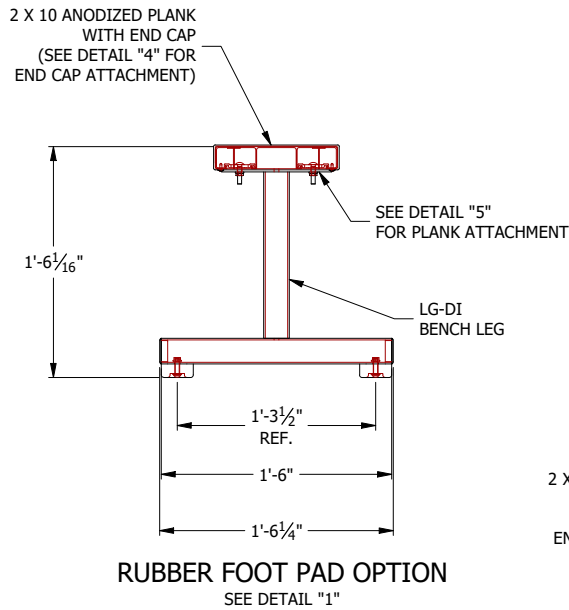


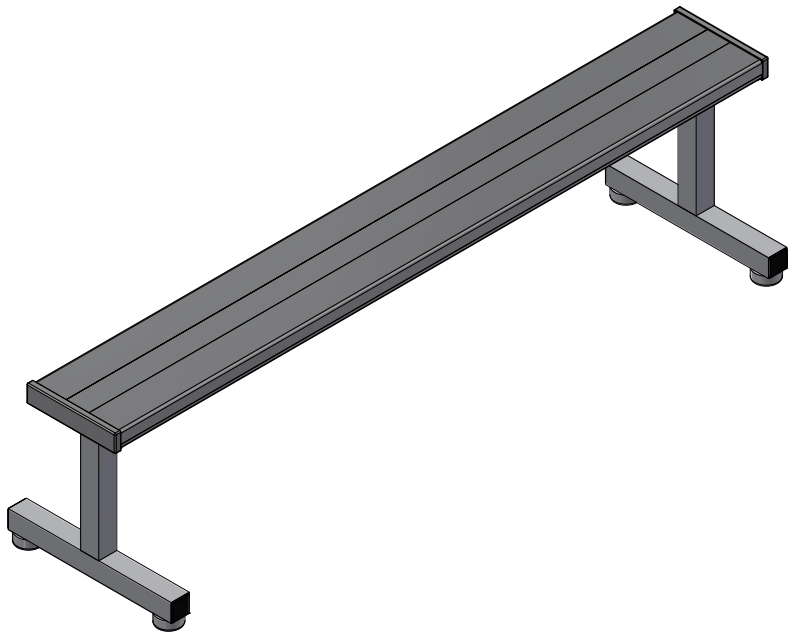


① RUBBER FOOT PAD ATTACHMENT

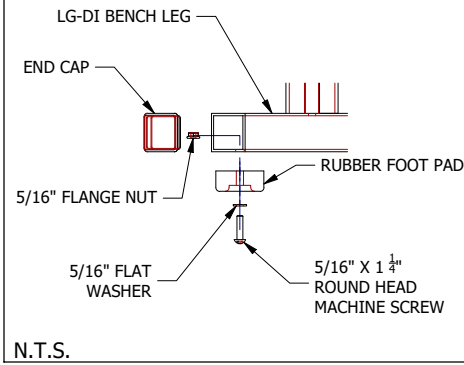


NOTE: THE RUBBER FOOT PAD IS NOT USED WHEN CONCRETE ANCHORS ARE USED. THE CONCRETE ANCHORS USE THE HOLES THAT THE RUBBER FOOT PAD WOULD OF ATTACHED THROUGH

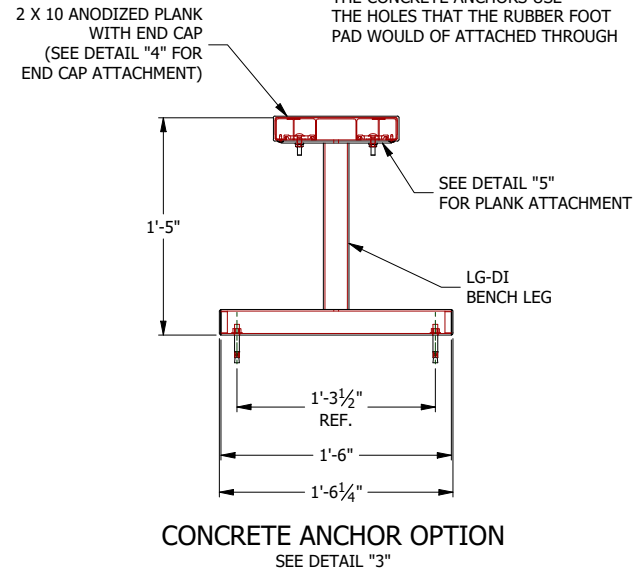


② END CAP ATTACHMENT

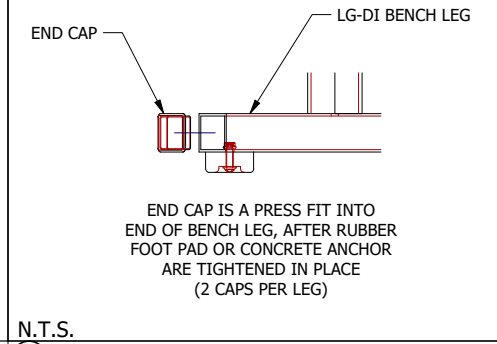

③ WEDGE ANCHOR - 3"

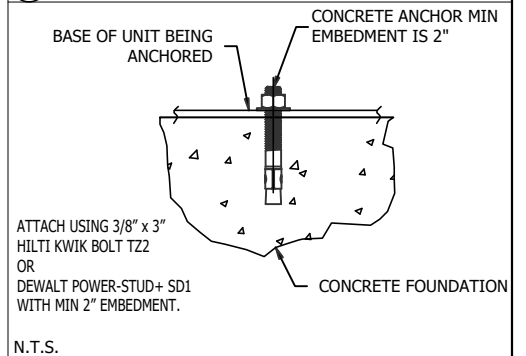

④ TYPICAL 2 X 10 END CAP ATTACHMENT

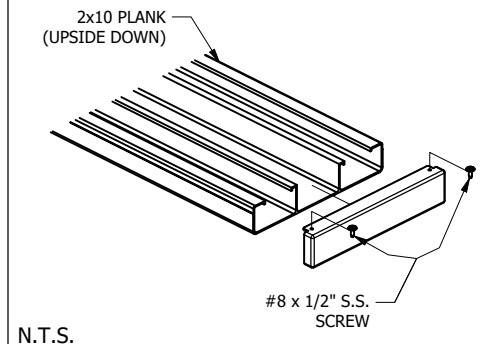

⑤ TYPICAL 2 X 10 PLANK ATTACHMENT

