INSTALLATION INSTRUCTIONS FOR M-PCS14 OUTDOOR SHOWER

Prior to installation:

- ❖ Read all instructions and refer to local codes.
- ❖ Supply line must be flushed of all foreign materials such as pipe dope, chips, etc.
- ❖ Shower piping and valve must be drained prior to being subjected to freezing temperatures.
- ❖ Maximum recommended working water pressure is 100 psi.

INSTALLATION INSTRUCTIONS:

1.) Refer to roughs for desired location of the shower head.

2.) Install vandal resistant fasteners into anchor plate prior to pouring concrete to keep threads on anchor plate clean of concrete.

3.) Tap anchor plate into ground and check that anchor plate is level and even with the floor.

4.) Install supply line with 1/2” stub out above anchor plate.

5.) Assemble O-Ring adapter to supply stub out, aligning mounting hold on O-Ring adapter to holes on anchor plate and secure with provided hex screws, make adjustments if needed.

6.) Pour concrete until it is level with top of anchor plate.

7.) Remove vandal resistant fasteners from anchor plate and position fixture over anchor base while engaging O-Ring connection and aligning mounting points.

8.) Secure fixture with vandal resistant fasteners.

9.) Turn on water supply and test for leaks.

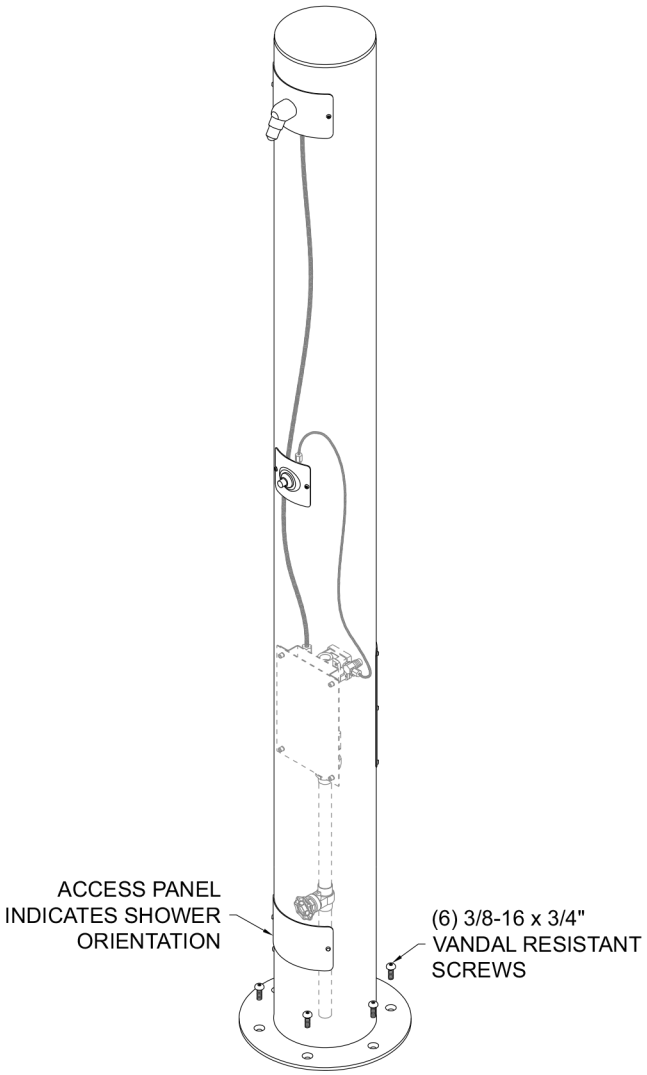

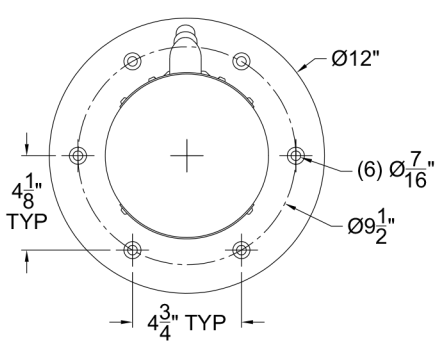

*Please visit **www.murdockmfg.com** for most current specifications.*

INSTALLATION INSTRUCTIONS FOR M-PCS14-FRU-IAP

Prior to installation:

- ❖ Read all instructions including FRU Freeze Resistant Valve System, #9938-340-0M1 manual and refer to local codes.
- ❖ Supply line must be flushed of all foreign materials such as pipe dope, chips, etc.
- ❖ Maximum recommended working water pressure is 100 psi.

INSTALLATION INSTRUCTIONS:

1.) Refer to roughs for desired location of the shower head and FRU assemblies.

2.) Install vandal resistant fasteners into -IAP In-ground Anchor Plate prior to pouring concrete to keep threads on anchor plate clean of concrete.

3.) Tap anchor plate into ground and check that anchor plate is level and even with the floor prior to pouring.

4.) Refer to FRU manual for FRU installation.

6.) Pour concrete until it is level with top of anchor plate.

7.) Remove vandal resistant fasteners from anchor plate and position fixture over anchor base.

8.) Secure fixture with vandal resistant fasteners.

9.) Flush supply lines before making up connections to valve. Turn on water supply and test for leaks.

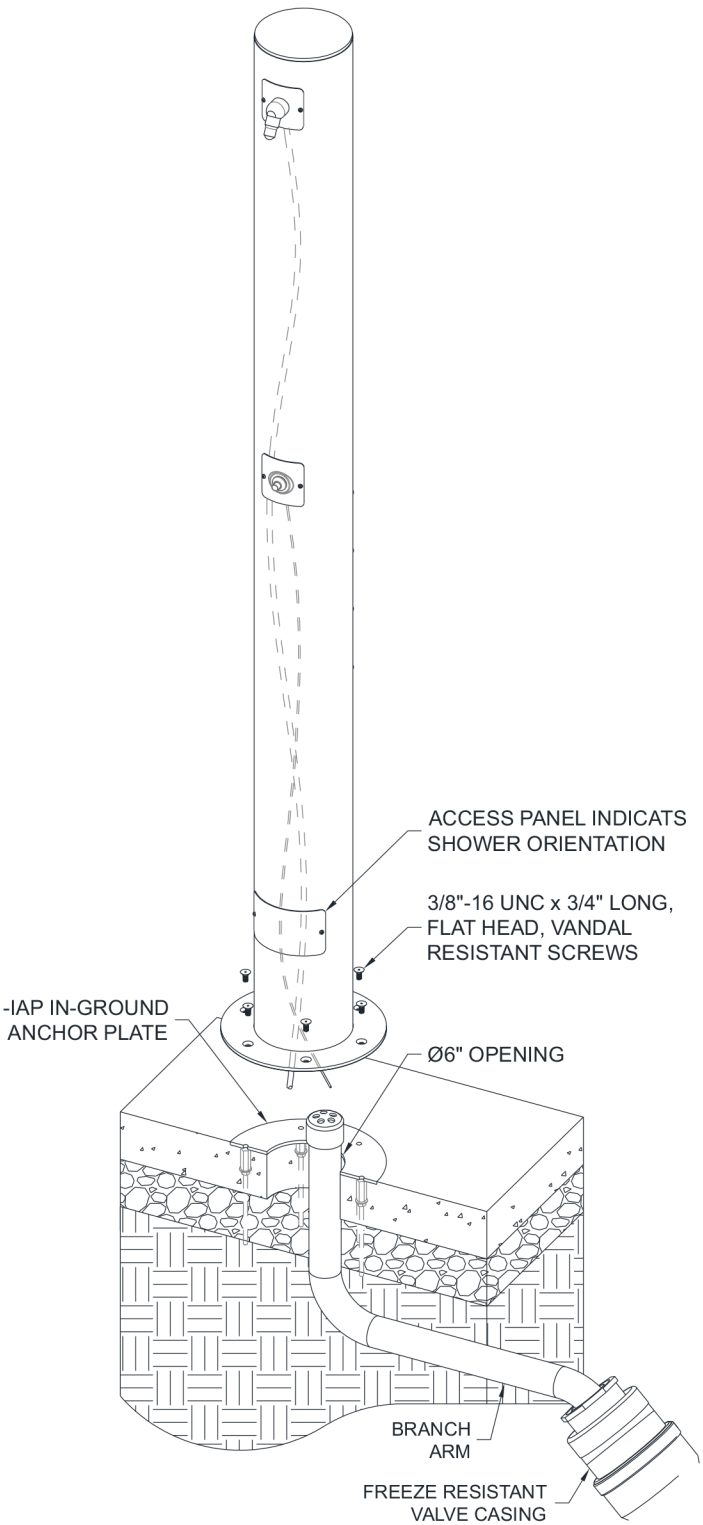

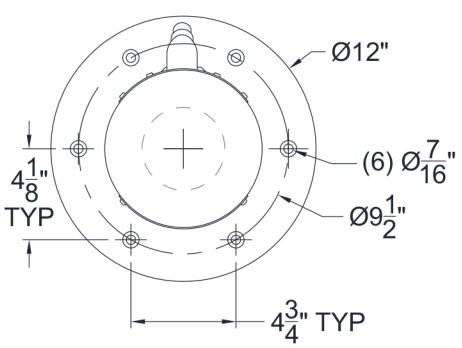

*Please visit **www.murdockmfg.com** for most current specifications.*